



Trusted Quality Fall Protection

**48** SPECIFIC INSTRUCTIONS










**PRO-LINE™**

**WEB HORIZONTAL LIFELINE SYSTEM**

**78** Model Numbers: 1200106, 1200107

# = 49	
# = 48	

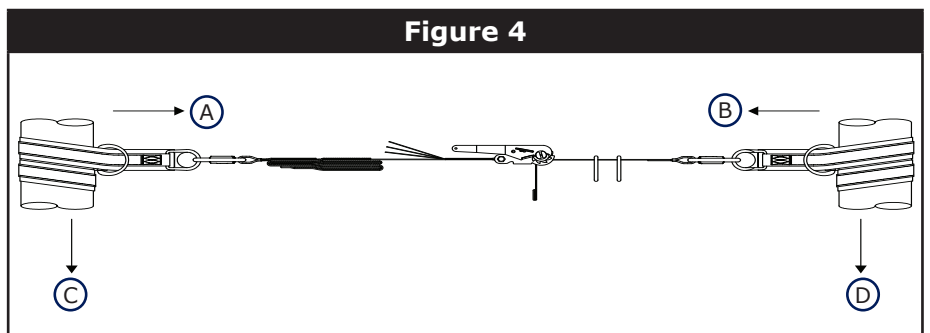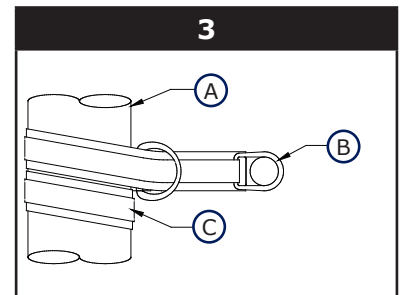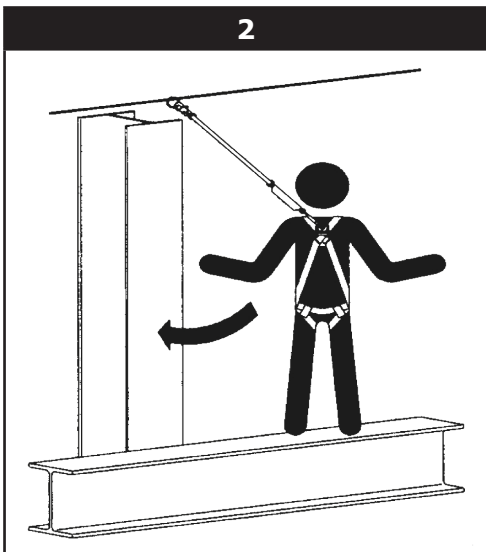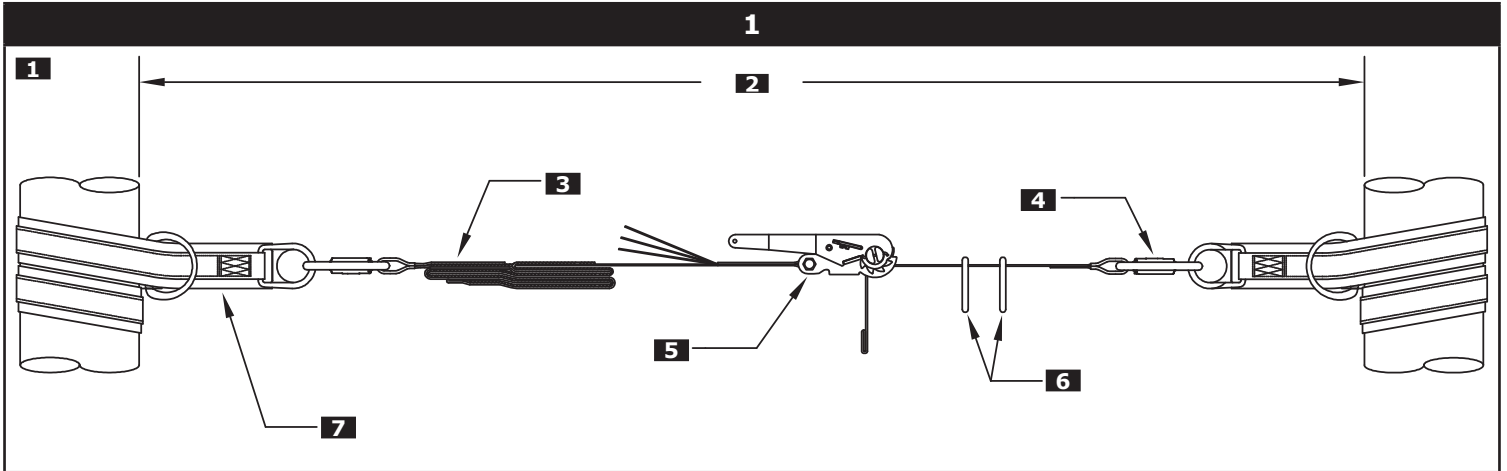

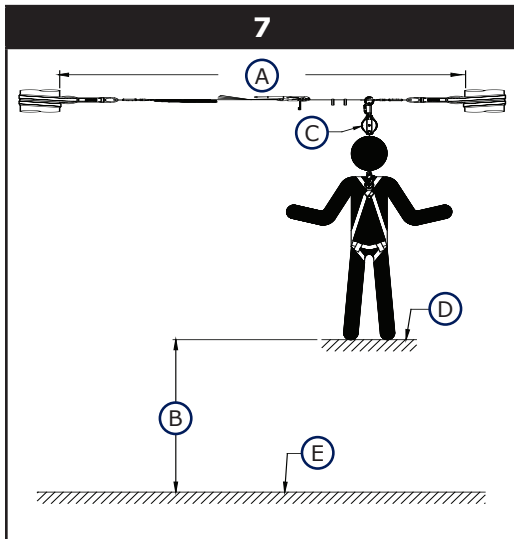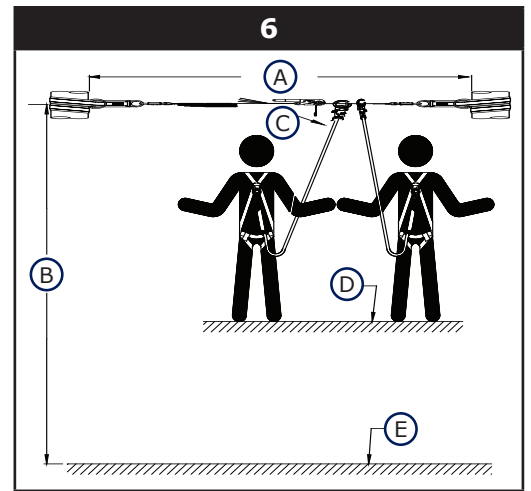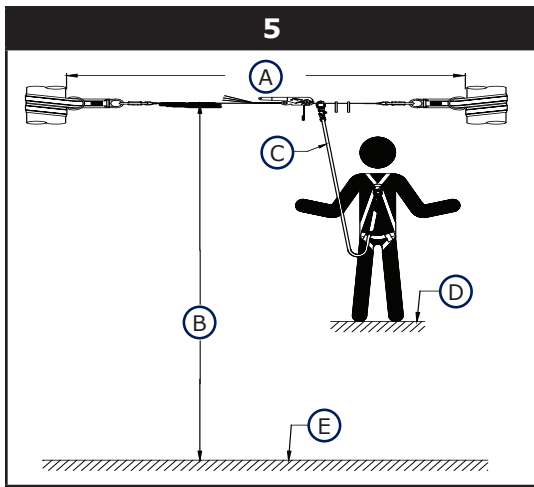

**8**

A	B			
	.91	1.22	1.52	1.82
0-3.05	5.49	5.79	6.09	6.40
3.05-4.57	5.60	5.94	6.25	6.55
4.57-6.10	5.84	6.14	6.45	6.75
6.10-7.62	6.01	6.32	6.63	6.93
7.62-9.14	6.22	6.52	6.83	7.14
9.14-10.67	6.45	6.76	7.06	7.36
10.67-12.19	6.83	7.13	7.44	7.75
12.19-13.72	7.06	7.36	7.67	7.98
13.72-15.24	7.21	7.52	7.82	8.13
15.20-16.76	7.44	7.75	8.05	8.36
16.76-18.29	7.65	7.95	8.25	8.56

**9**

A	B			
	.91	1.22	1.52	1.82
0-3.05	5.79	6.09	6.40	6.70
3.05-4.57	6.17	6.48	6.78	7.09
4.57-6.10	6.60	6.90	7.20	7.51
6.10-7.62	7.06	7.36	7.67	7.98
7.62-9.14	7.49	7.80	8.10	8.41
9.14-10.67	7.92	8.22	8.53	8.83
10.67-12.19	8.36	8.66	8.97	9.27
12.19-13.72	8.76	9.06	9.37	9.68
13.72-15.24	9.25	9.55	9.86	10.16
15.24-16.76	9.70	9.96	10.26	10.57
16.76-18.29	10.10	10.41	10.71	11.02

**10**

A	B	C
0-3.05	3.27	4.49
3.05-4.57	3.43	4.67
4.57-6.10	3.53	4.77
6.10-7.62	3.68	4.95
7.62-9.14	3.81	5.06
9.14-10.67	4.14	5.33
10.67-12.19	4.47	5.53
12.19-13.72	4.80	5.86
13.72-15.24	5.18	6.20
15.24-16.76	5.51	6.53
16.76-18.29	5.84	7.08

**FORWARD:** This instruction describes the installation and use of the Pro-Line™ Web Horizontal Lifeline System. It should be used as part of an employee training program.

EN

**WARNING:** *This product is part of a personal fall arrest system. The user must follow the manufacturer's instructions for each component of the system. These instructions must be provided to the user of this equipment. The user must read and understand these instructions before using this equipment. Manufacturer's instructions must be followed for proper use and maintenance of this equipment. Alterations or misuse of this equipment, or failure to follow instructions, may result in serious injury or death.*



**GENERAL GLOSSARY REFERENCE BOXES:** *White Glossary Reference Boxes* on the front cover of this instruction reference 'Glossary' items in the "General Instructions for Use and Maintenance" (5902392).



**SPECIFIC GLOSSARY REFERENCE BOXES:** *Black Glossary Reference Boxes* on the front cover of this instruction reference the following items:

**1:** Pro-Line™ Web HLL System **2:** Span length 18.29 m. max **3:** In-line Energy Absorber  
**4:** Carabiner **5:** Ratchet Tensioner **6:** Attachment O-ring for user (Lanyard) **7:** Tie-off Adapter (Anchorage Connector)

**TRAINING:** It is the responsibility of users of this equipment to understand these instructions and be trained in correct installation, use, and maintenance of this equipment. Users must be aware of the consequences of improper installation or use of this equipment. This instruction manual is not a substitute for a training program. Training must be provided on a periodic basis to ensure user proficiency.

**IMPORTANT:** *Record the product identification information from the ID label in the inspection and maintenance log in this manual.*

**PURPOSE:** The Web Horizontal Lifeline System is designed for use as an anchoring means for one or two persons. Use the Web Horizontal Lifeline System where horizontal mobility and fall protection are required.

**LIMITATIONS:** The following limits apply to the installation and use of the Web Horizontal Lifeline System. Other limitations may apply:

**HORIZONTAL LIFELINE SPAN:** The maximum span distance is 18.29 m. The span length must be reduced when clearance is limited.

**ANCHORAGES:** The Web horizontal lifeline must be installed on anchorages that meet the requirements.

**SYSTEM CAPACITY:** The maximum capacity of the Web horizontal lifeline is two persons. The maximum weight of each person, including tools and clothing, is 141 kg.

**CONNECTING SUBSYSTEM:** Each person's connecting subsystem must limit fall arrest forces to 4kN or less.

**FREE FALL:** Rig and use the personal fall arrest system such that the maximum potential free fall does not exceed Government regulatory and subsystem manufacturer's requirements. See subsystem manufacturer's instructions for more information.

**FALL CLEARANCE:** There must be sufficient clearance below the worker to arrest a fall before striking the lower level or obstruction.

**BODY SUPPORT:** A full body harness must be used with the Web Horizontal Lifeline System.

**ENVIRONMENTAL HAZARDS:** Use of this equipment in areas with environmental hazards may require additional precautions to reduce the possibility of injury to the user or damage to the equipment. Hazards may include, but are not limited to; heat, chemicals, corrosive environments, high voltage power lines, gases, moving machinery, and sharp edges. Contact Capital Safety if you have questions about using this equipment where environmental hazards exist.

**SWING FALLS:** See Figure 2. Swing falls occur when the anchorage point is not directly overhead. The force of striking an object in a swing fall may cause serious injury or death. Minimize swing falls by working as directly below the anchorage point as possible. Do not permit a swing fall if injury could occur. Swing falls will significantly increase the clearance required when a self retracting lifeline or other variable length connecting subsystem is used. If a swing fall situation exists in your application, contact Capital Safety before proceeding.

**TRAINING:** This equipment must be installed and used by persons trained in its correct application and use.

**APPLICABLE STANDARDS:** The Pro-Line™ Web HLL System complies with EN:795.

**PERSONAL FALL ARREST SYSTEM COMPONENTS:** The Web horizontal lifeline must be used with Capital Safety

approved components and subsystems. Non-approved components may be incompatible, and could affect the safety and reliability of the complete system.

**PERSONAL FALL ARREST SYSTEM CONNECTORS:** Connectors used to attach to the attachment O-ring on the horizontal lifeline (hooks, carabiners, D-rings) must support at least 22.2 kN. Connectors and attachment elements must be compatible in size, shape, and strength. Non-compatible connectors may unintentionally disengage (roll-out). Do not use non-locking connectors with this system.

**ANCHORAGE CONNECTORS:** Connectors used to attach the horizontal lifeline to end anchors must be compatible with the connection point. The connection must be positive; and, with connecting elements, capable of sustaining a 22.2 kN load without failure.

**STRUCTURE LOAD:** Structural anchorage points must be rigid, and capable of supporting at least 16 kN along the axis of the horizontal lifeline. Anchorages must also support at least 16 kN applied in all potential directions of fall arrest that are perpendicular to the axis of the horizontal lifeline.

**WARNING:** Anchorages must be rigid. Large deformations of the anchorage will affect system performance, and may increase the required fall clearance below the system, which could result in serious injury or death.

**Connecting Subsystem:** The connecting subsystem is the portion of the personal fall arrest system that is used to connect between the horizontal lifeline subsystem and harness fall arrest attachment element. The connecting subsystem must limit forces applied to the horizontal lifeline to 4 kN or less.

**BEFORE EACH USE** inspect this equipment. Do not use this equipment if inspection reveals an unsafe or defective condition. Plan your use of the fall protection system prior to exposing workers to dangerous situations. Consider all factors affecting your safety before using this system. Read and understand all manufacturer's instructions for each component of the personal fall arrest system. All Capital Safety harnesses and connecting subsystems are supplied with separate user instructions. Keep all instructions for future reference.

Review these instructions to ensure system limitations and other requirements have been adhered to. Review applicable information regarding system clearance criteria, and ensure changes have not been made to the system installation (i.e. length) or occurred at the job site that could affect the required fall clearance.

Do not use the system if changes are required.

**WARNING:** Do not alter or intentionally misuse this equipment. Consult Capital Safety when using this equipment in combination with components or subsystems other than those described in this manual. Some subsystem and component combinations may interfere with the operation of this equipment. Use caution when using this equipment around moving machinery, electrical hazards, chemical hazards, and sharp edges.

**WARNING:** Consult your doctor if there is reason to doubt your fitness to absorb the impact from a fall arrest. Age and fitness can affect your ability to withstand fall arrest forces. Pregnant women and minors must not use this system.

**SYSTEM INSTALLATION:** Figure 1 shows a typical Web horizontal lifeline installation. When using an energy absorbing lanyard to connect to the system, the end anchorages must be located at a height which will limit the free fall to 2 m. When using a self retracting lifeline (SRL) to connect to the system, the end anchorages must be located above the user. The SRL, when fully retracted, must be above the harness attachment level. The horizontal lifeline system should be positioned at a level that will minimize free fall while allowing ease of use. The horizontal lifeline should be positioned near the work location to minimize swing fall hazards. The connecting subsystem length should be kept as short as possible to reduce the potential free fall and required clearance distance. Both anchorages must be installed at approximately the same elevation, so that the horizontal lifeline system is not sloped more than 5 degrees.

Determine the locations of the end anchorages and evaluate their strengths. Determine the span length and evaluate the required clearance using Figures 5, 6, 7, 8, 9, and 10.

**Figure 3 - Installing Tie-off Adapter to Vertical or Sloped Anchorage Structure**

(A)	Vertical or sloped anchorage structure
(B)	Tie-off adaptor
(C)	Wrap tie-off adaptor twice around anchorage structure

#### Figure 4 - Anchorage Strength Requirements

(A)	16.0 kN minimum
(B)	
(C)	16.0 kN minimum (in all potential directions of fall arrest that are perpendicular to axis of lifeline)
(D)	

#### Figure 5 - Clearance Evaluation for One Worker Connected to the System with a Capital Safety Energy Absorbing Lanyard

(A)	Span Length
(B)	Required clearance from nearest lower level or obstruction to horizontal lifeline system height: 1.) Find your system span length in Figure 8. 2.) Find your lanyard length in Figure 8. 3.) The required clearance is where the span length and lanyard length intersect.
(C)	Energy absorbing lanyard
(D)	Working level
(E)	Lower level or obstruction

#### Figure 6 - Clearance for Two Workers Connected to the System with a Capital Safety Energy Absorbing Lanyard

(A)	Span length
(B)	Required clearance from nearest lower level or obstruction to horizontal lifeline system height: 1.) Find your system span length in Figure 9. 2.) Find your lanyard length in Figure 9. 3.) The required clearance is where the span length and lanyard length intersect.
(C)	Energy absorbing lanyard
(D)	Working level
(E)	Lower level or obstruction

#### Figure 7 - Clearance Evaluation for One or Two Workers Connected to the System with a Capital Safety Self-Retracting Lifeline

(A)	Span length
(B)	Required clearance from nearest lower level or obstruction to working level: 1.) Find your system span length in Figure 10. 2.) Find the number of workers to be connected to the system. 3.) The required clearance is where the span length and number of workers intersect.
(C)	Self-retracting lifeline
(D)	Working level
(E)	Lower level or obstruction

**Figure 8 - Required Clearance for One Worker Connected to the System with a Capital Safety Energy Absorbing Lanyard**

(A)	Span length in meters
(B)	Length of energy absorbing lanyard in meters

**Figure 9 - Required Clearance for Two Workers Connected to the System with a Capital Safety Energy Absorbing Lanyard**

(A)	Span length in meters
(B)	Length of energy absorbing lanyard in meters

**Figure 10 - Required Clearance for One or Two Workers Connected to the System with a Self-Retracting Lifeline**

(A)	Span length in meters
(B)	Required clearance below working level for one worker in meters
(C)	Required clearance below working level for two workers in meters

Install the anchorage connectors. The Web Horizontal Lifeline System includes two tie-off adaptor anchorage connectors. To ensure the tie-off adaptor does not slide down a vertical or sloped anchorage, the tie-off adaptor must be wrapped twice around the structure as shown in Figure 3. Refer to the tie-off adaptor instructions for complete installation information. The horizontal lifeline may be secured directly to the anchorage when the anchorage incorporates a compatible attachment element that meets the requirements.

Secure each end of the horizontal lifeline to the anchorage connectors with the snap hook or carabiner.

**PLEASE NOTE:** *There is no in-line tension indicator and it is recommended that the operator tension the ratchet with one hand only on the handle, and with no external parts be used to further tighten the line. Normal working tension is achieved by a one-handed operation will tension the webbing line satisfactorily.*

*Installation Tip:* When attaching to the tie-off adaptor, connect carrying bag through handle to secure bag to the end of the system. Note: Bag handle is not to be used as an anchorage connector, only to be held in place by passing the connection through the handle.

Remove the slack from the horizontal lifeline by pulling the web through the ratchet tensioner by hand. At least 150 mm of web should be pulled through the ratchet tensioner prior to tensioning. Once the line is pulled through the adjuster as tight as possible by hand, activate the ratchet by rotating the handle back and forth in a 180 degree arc to tension the webbing line tight.

**PLEASE NOTE:** *There is no in-line tension indicator and it is recommended that the operator tension the ratchet with one hand only on the handle, and with no external parts be used to further tighten the line. Normal working tension is achieved by a one-handed operation will tension the webbing line satisfactorily.*

*Installation Tip:* When wound onto the central hub during tensioning, the webbing should have a minimum of 1.5 times the revolution of the ratchet hub. Should the webbing over fill the ratchet, it can jam requiring the operator to release the line and start again.

Once tensioned, the ratchet handle must be pushed to the closed and locked position. Surplus webbing should be folded and placed in the bag if attached or near the end of the system away from center work area

**CONNECTING TO THE HORIZONTAL LIFELINE SYSTEM:** Approach the work area using the appropriate access equipment. Connect your personal fall arrest system to one of the attachment O-rings on the horizontal lifeline. Connectors must meet all compatibility and strength requirements.

**HAZARDOUS SITUATIONS:** Do not take unnecessary risks, such as jumping or reaching too far from the edge of the working surface. Do not allow the connecting subsystem to pass under arms or between feet. To avoid inadequate clearance, do not climb above the horizontal lifeline. To avoid swing fall hazards, do not work too far from either side of the horizontal lifeline.

**TWO (2) PERSONS CONNECTED TO THE HLL:** When a person falls while connected to the horizontal lifeline, the system will deflect. If two (2) persons are connected to the same horizontal lifeline, and one (1) person falls,

the second person may be pulled off the working surface due to deflection. The potential for the second person falling increases as the horizontal lifeline span length increases. The use of independent horizontal lifeline systems for each person, or shorter span length, is recommended to minimize the potential of the second person falling.

**FREE FALL:** The personal fall arrest system must be rigged to limit free falls to 2 m. or less when using an energy absorbing lanyard, or such that the SRL is overhead without slack.

**SHARP EDGES:** Avoid working where the connecting subsystem or other system components will be in contact with, or abrade against, unprotected sharp edges. If working around sharp edges is unavoidable, a protective cover must be used to prevent cutting of the personal fall arrest system components.

**IN THE EVENT OF A FALL:** The responsible party must have a rescue plan and the ability to implement a rescue. Tolerable suspension time in a full body harness is limited, so a prompt rescue is critical.

**RESCUE:** With the number of potential scenarios for a worker requiring rescue, an on-site rescue team is beneficial. The rescue team is given the tools, both in equipment and technique, to perform a successful rescue. Training should be provided on a periodic basis to ensure rescuers' proficiency.

**SYSTEM REMOVAL:** When no longer required, the horizontal lifeline system should be removed from the job site. Release tension on the horizontal lifeline:

Pull on the release lever under the handle on the ratchet tensioner and open the handle fully. This will release the lock and allow the webbing safety line to rotate within the hub. Remove the webbing safety line from the anchorage points and roll the webbing up from the long end towards the center. Fold all the parts of the webbing line into the storage bag including the instructions and close.

It is the responsibility of all users of this equipment to understand these instructions, and to be trained in the correct installation, use, and maintenance of this equipment. These individuals must be aware of the consequences of improper installation or use of this equipment. This user manual is not a substitute for a comprehensive training program. Training must be provided on a periodic basis to ensure proficiency of the users.

**BEFORE EACH INSTALLATION:** Inspect all system components according to these or other manufacturer's instructions. System components must be formally inspected by a qualified person, other than the user, at least annually. Formal inspections should concentrate on visible signs of deterioration or damage to the system components. Items found to be defective must be replaced. Do not use components if inspection reveals an unsafe or defective condition. Record results of each inspection in the inspection and maintenance log of this manual.

**INSTALLED SYSTEMS:** An inspection of the horizontal lifeline system by a qualified person must be conducted after the system is installed. The system must be periodically inspected by a qualified person when left installed for an extended period, and prior to each day's use. Periodic inspections should be performed at least monthly, or more frequently when site conditions and use warrant. Inspections of installed systems should include the inspection steps listed.

#### **BEFORE SYSTEM USE:**

Inspect all metal components (hooks, O-rings, ratchet tensioner, etc.) for cracks, deformities, corrosion, or other damage that may affect their strength or operation. Inspect webbing for cuts, edge wear tears, burns, abrasion, and chemical contamination. Webbing abrasion over the edges whilst under tension may cause damage to outer fibres leading to possible failure. Inspect system labels. The labels must be present and fully legible.

**IMPORTANT:** *If this equipment is subjected to the forces of a fall arrest, it must be removed from service and destroyed, or returned to Capital Safety for inspection or repair.*

If inspection reveals an unsafe or defective condition, remove unit from service and destroy, or contact Capital Safety for possible repair.

**IMPORTANT:** *Only Capital Safety or parties authorized in writing may make repairs to this equipment.*

**USER EQUIPMENT:** Inspect harness and energy absorbing lanyard or SRL according to manufacturer's instruction.

**CLEANING AND MAINTENANCE:** Clean the Web horizontal lifeline system with water and a mild detergent. Wipe dry with a clean, dry cloth and hang to air dry. Do not force dry with heat. An excessive build-up of dirt, paint, etc. may prevent the system from working properly, and in severe cases, weaken the web.

**STORAGE:** Store this horizontal lifeline system in a clean, dry environment, out of direct sunlight. Avoid areas where chemical vapors are present. Thoroughly inspect the system after extended storage.

**USER EQUIPMENT:** Maintain, service, and store user equipment according to manufacturer's instructions.